

SPYPOINT[®]

DEUTSCH

ENGLISH

FRANÇAIS

ITALIANO

LINK-MICRO

CELLULAR TRAIL CAMERA

NO.SP0088 / No. 680097



START GUIDE



IN THE BOX

 
- 1x Camera
- 1x Installation strap
- 1x Quick Start Guide
- 1x Micro SIM card already activated and inserted in the camera

Note: Memory card and batteries sold separately.

User manual, latest firmware & FAQ available at:
spypoint.info/downloads

COMPONENTS

- 1 Antenna
- 2 Detection lens
- 3 Micro SD Card slot
- 4 Light sensor
- 5 Delay light
- 6 Photo lens
- 7 LED
- 8 "status" Light
- 9 ON/OFF button
- 10 Battery case outlet
- 11 MicroSIM Card slot
- 12 Battery housing
- 13 Slot for installation strap
- 14 Locking latch
- 15 Cable lock hole
- 16 12V Jack
- 17 Tripod stand

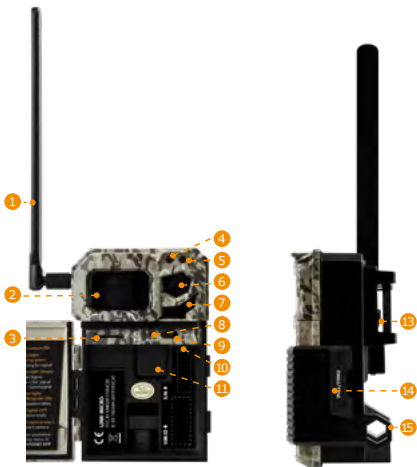

Steel security boxes may reduce the wireless functionalities of the product. (#SB-300 sold separately)

 
PREPARATION

FINDING THE SIM ID

The SIM ID number is located inside the casing behind the battery housing. You will need this number to complete the LINK-MICRO camera registration to connect to the application.


CHOOSING A POWER SOURCE

8x R6 (AA) Lithium or Alkaline batteries

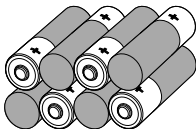

Be sure to insert the AA batteries according to the polarity indications (+) and (-).

 12V power source

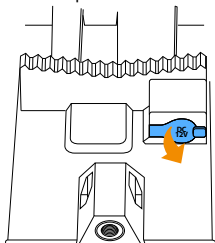


To ensure maximum performance of the camera and prevent battery leakage, we recommend using new batteries. Use **ONLY** Lithium batteries or **ONLY** Alkaline batteries. Rechargeable [AA] batteries are not recommended as the lower voltage they produce can cause operational issues.

To get the best possible results and maximum battery life, we recommend the use of an external 12V source.

INSERTING A MEMORY CARD

 Always ensure that the camera is turned off before inserting a memory card. Insert a MICRO SD memory card (up to 32 GB capacity) into the MICRO SD card slot with the label side facing upwards. The card is inserted correctly when a click is heard.

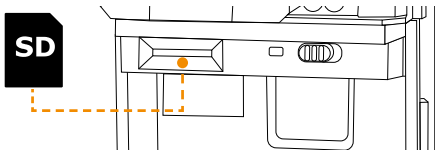

We recommend formatting your MICRO SD card if it was previously in another electronic device.

GETTING STARTED

INSTALLING THE FREE SPYPOINT APP

The SPYPOINT App allows you to connect and control your camera remotely using a smartphone or tablet. Features include viewing your camera status, viewing pictures, full remote camera control and more.

Note: If you don't have a smartphone or tablet, please contact our Customer Service to activate your camera.

Call us at our toll free number:

+49 (0) 36 331 / 50 54 - 0,

or email us:

support@sypoint.de

Installing the free App

1. Make sure you have a data plan with either your smartphone or tablet, or a WIFI connection.
2. To install the App, you can either:
 - Download it from Google Play™
(Google Play is a registered trademark of Google Inc)
 - Download it from the App Store™
(App Store is a trademark of Apple Inc.)
3. Search for the App: SPYPOINT by SPYPOINT.
4. Install the App on your smartphone or tablet.

Run the App SPYPOINT

Start the App and it will guide you through a few questions. You will then receive an email confirming the activation of your camera.

Just follow the prompts in the App.

APP CONFIGURATION

The SPYPOINT App allows you to configure all the camera settings. These new settings will take effect the next time the camera transfers data to update its status. The most important settings are:

Basic settings

MODE - PHOTO

- Delay:** Sets the time interval between each detection before the camera takes the next photo.
- Multi-photo:** Takes up to 2 consecutive shots at each detection with a 5 second delay between each photo.

Transfer configuration

- First transfer time:** Allows the user to choose what time of the day the camera will carry out its first transfer.
- Transfer frequency:** Allows the user to choose the number of transfers that the camera performs daily.

Advanced options configuration

- Schedule:** Allows the user to set the period of operation of the camera for each day of the week. The scheduled start and stop times delineate the hours when the camera is activated and can record photos. For a 24 h activation, the start and stop times shall be 00 h 00 or 12 h AM.

STARTING THE CAMERA



We recommend formatting your MICRO SD card if it was used in another electronic device.

- Turn on the camera (ON button);
 - Use the OFF/ON switch to turn on the camera;
 - The green "status" light flashes – searching for a signal;
 - The signal search can take a few minutes;
 - Light "status": One of the following 3 colors will light up continuously:
 - Red: insufficient signal;
 - Orange: acceptable signal;
 - Green: optimal signal;
 - When the top right light flashes red, 30 seconds remain before the photo mode is turned on;
 - The camera is ready for use when all the lights turn off;
 - If the light is red during step 3, you should:
 - Turn your camera off and then back on;
 - Retry while pointing the antenna at different angles;
 - Move the camera.
- * Using an amplified antenna (#CA-01, not included) could improve signal capture.

CAMERA INSTALLATION

Install the camera using the strap

Recommended installation height

The camera should be installed at the same height as the animal's mid-body.

Ideal installation for quality images

The targeted animal should be 7.5 m away from the camera for a better field of view.

To get brighter pictures at night, you should have elements in the background to reflect back the camera's flash.

Please note that the camera should not be placed directly facing the sun to avoid backlighting and false detection.

Important

Before the end of the free 30-day trial

Subscribe to a service plan in the App to benefit from SPYPOINT EXPERIENCE lease note that if you choose not to subscribe to a plan, you will still be able to receive up to 100 photos per month with a photo history of the last 7 days with our FREE monthly plan.

spypoint.info/datentarife

DISPOSAL

ONLY USE ORIGINAL SPARE PARTS AND ACCESSORIES.

If one day your electrical appliance has been used so intensively that it has to be replaced, or if you no longer have any use for it, you are obliged to dispose of it at a central recycling centre..

Information on return points for your electrical appliance can be obtained from your local waste disposal company or from your local administrative offices.

Electrical appliances contain valuable recyclable raw materials. They help to ensure that valuable raw materials are recycled when you return your old appliance to a central collection point.

Electrical appliances also contain substances which, if disposed of improperly, can contribute to damage to people and the environment.

The crossed-out wheeled bin symbol represents the obligation that the labelled device must be sent to a separate collection of electrical and electronic equipment for recycling.



FREQUENCY

FREQUENCY RANGE:

800/ 850/ 900/ 1900/ 2100MHz

MAXIMUM TRANSMISSION POWER:

Frequency	Max.
GSM850	33dBm±2dB
EGSM900	33dBm±2dB
DCS1800	30dBm±2dB
PCS1900	30dBm±2dB
GSM850 (8-PSK)	27dBm±3dB
EGSM900 (8-PSK)	27dBm±3dB
DCS1800 (8-PSK)	26dBm±3dB
PCS1900 (8-PSK)	26dBm±3dB
UMTS 2100	24dBm+1.7/-3.7dB
UMTS 1900	24dBm+1.7/-3.7dB
UMTS 900	24dBm+1.7/-3.7dB
UMTS 850	24dBm+1.7/-3.7dB
UMTS 800	24dBm+1.7/-3.7dB

Thank You


for choosing




User manual, latest firmware & FAQ available at:

www.spypoint.info

 support.spypoint.de

 +49 (0) 36 331 / 50 54 - 0

 Live Chat - support.spypoint.de

Join the community



EUROHUNT GmbH
Harzblick 25, 99768,
Harztor OT Ilfeld Germany



GG Telecom Inc.
330 de la Jacques-Cartier
Victoriaville QC Canada G6T 1Y3



GG Telecom Inc.
1825 E Army Post Rd
Des Moines IA USA 50320